


Wire Basket Tray Tool-Free Splice

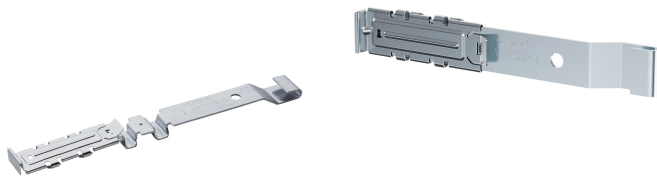

The nVent CADDY Wire Basket Tray Tool-Free Splice is an efficient way to link multiple sections of wire basket trays. With fewer components and no loose pieces, installation is quick, easy and straightforward. This solution allows installers to restrict movement and stabilize unsteady sections while joining several trays together, further enabling continuity and cable safety in the case of an electrical event.

Designed specifically to work with nVent CADDY Wire Basket Tray, simply slide the Wire Basket Tray Tool-Free Splice over the sides or bottom of the tray and lock the tab into place. Removal is just as quick—pull the locking tab out, slide the lock off and reuse the splice as many times as needed.

FEATURES



Secure hold with locking mechanism keeping trays in place


No assembly required

No sharp edges or catching points for wire

Reusable and tool-free—easy-to-install, easy-to-remove

DIAGRAMS

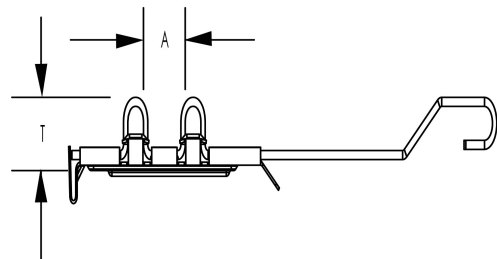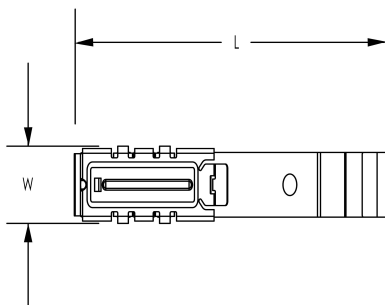

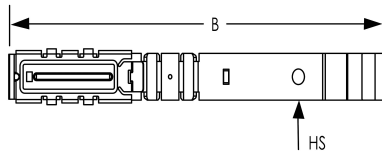

WARNING

nVent products shall be installed and used only as indicated in nVent's product instruction sheets and training materials. Instruction sheets are available at www.nvent.com and from your nVent customer service representative. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death and/or void your warranty.

North America

+1.800.753.9221
Option 1 – Customer Care
Option 2 – Technical
Support

Europe

Netherlands:
+31 800-0200135
France:
+33 800 901 793

Europe

Germany:
800 1890272
Other Countries:
+31 13 5835404

APAC

Shanghai:
+ 86 21 2412 1618/19
Sydney:
+61 2 9751 8500



©2026 nVent. All nVent marks and logos are owned or licensed by nVent Services GmbH or its affiliates. All other trademarks are the property of their respective owners. nVent reserves the right to change specifications without notice.

This document is system-generated.



nVent.com 04001