


Operator Interface Control Enclosure, OICE

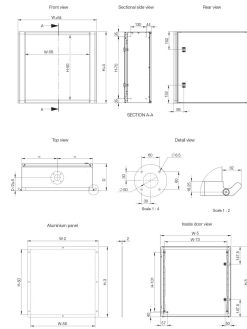

The mild steel operator interface control enclosure, OICE, has a pre-machined hole pattern to allow for the fixation to a swing arm, plus a removable front plate at an IP 55 protection degree. Components can be easily fitted thanks to the removable front plate, but will also be easily accessible through a rear door. Side handles on the enclosure allow for easy movement of the enclosure into the working position.

INDUSTRY STANDARDS

CE UKCA

GOST

FEATURES

Material: Body and door are manufactured from 1.2 mm mild steel, front cover and handles manufactured from aluminium.

Body: Folded and seam welded, with maximum opening. The front fitted with an aluminium front panel. Handling grips mounted to front, left and right edges.

Rear door: Surface mounted, with 130° opening. Concealed removable hinges, with captive pin. Hinges can be mounted to allow left or right hand opening. Door profiles MMDP are available as an accessory.

Lock: Customised lock, with double grip for easy opening of the door. Double-bit 3 mm insert and 90° movement. Other inserts and locks are available as an accessory.

Protection: IP 55, IK 10.

Finish: RAL 7035 structured powder coating. Top bottom profile RAL7016.

Delivery: Enclosure with aluminium front panel, rear door, plastic double-bit 3 mm key and mounting accessories.

Material:	Aluminum; Aluminum
Finish:	Powder Coated
Color:	Light Gray
Color Code:	RAL 7035

SPECIFICATIONS

Catalog Number	E-Number	Height	Width	Depth	Weight
OICE303015	2411815	300mm	300mm	155mm	4.5kg
OICE304021	2411816	300mm	400mm	210mm	6.3kg
OICE404021	2411817	400mm	400mm	210mm	7.3kg
OICE406021	2411818	400mm	600mm	210mm	9.7kg

Catalog Number	E-Number	Height	Width	Depth	Weight
OICE505021	2411819	500mm	500mm	210mm	10.1kg
OICE506021	2411820	500mm	600mm	210mm	11.3kg
OICE606021	2411821	600mm	600mm	210mm	11.3kg

WARNING

nVent products shall be installed and used only as indicated in nVent's product instruction sheets and training materials. Instruction sheets are available at www.nvent.com and from your nVent customer service representative. Improper installation, misuse, misapplication or other failure to completely follow nVent's instructions and warnings may cause product malfunction, property damage, serious bodily injury and death and/or void your warranty.

